

Installation Instructions of 4.3-10 for 1/2" super flexible cable

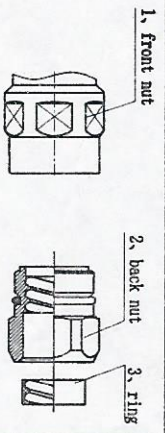


Fig1

Structure of connector: (Fig1)
1, front nut
2, back nut
3, ring

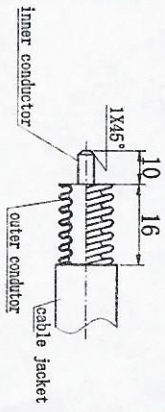


Fig2

Stripping dimensions are as shown Fig2 shows, pay more attention while stripping:
(1)The end surface of inner conductor should be chamfered
(2) Remove dirt on all surfaces

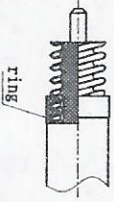


Fig3

Push the ring onto the outer conductor of cable, as Fig3 shows

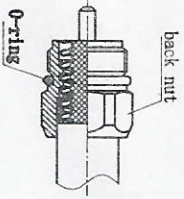


Fig4

Push the back nut as Fig4 shows. Screw the back nut in the outer conductor. To make sure the end surface of back nut is even with outer conductor of cable

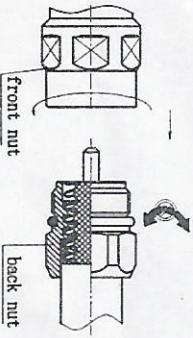


Fig5

Screw the front and back nuts together as Fig5 shows
(Note: Only use wrench screw the front nut, screw the back nut is not acceptable)